

# KENAY




K U S T O M S

## FR-PX2-SGRP INSTALL INSTRUCTIONS



Remove cover from courtesy lamp, there are 4 clips, pull down from one side, then pull down the other.

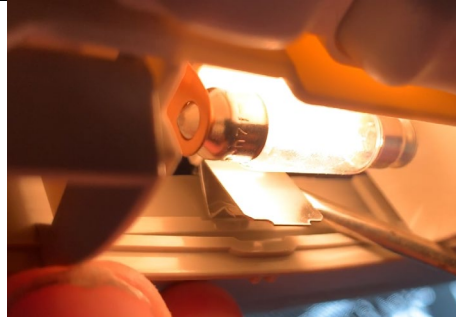

Use a flat head screw driver to pop the back clip from being held in, then pull the courtesy lamp out



Undo 2x T20 bolts



Unclip console from the front (closest to windscreen) then slide console forward so the 2 rear clips clear the metal bracket



Unclip the side of the console from the metal bracket and remove the console from the head lining.

Once removed, remove the black cover from the sunglasses holder, then remove sunglasses holder and gear assembly.



Install the FR-PX23-SGRP in place of the sunglasses holder. Tighten the 2 side screws into the holes in the console. Install supplied washer and screw into the centre front mounting point.

Reinstall, taking note to place the 2 rear clips over the metal bracket and sliding the console rearward.



@KENAYKUSTOMS

The team at Kenay Kustoms thank you for your purchase :)

Please share some pics with us when you have it all installed!